

OKI MONO LED PRINTERS		
OKI Model	Drum	Toner
OL400/800 series (OL400/OL410/OL800/OL810/OL820/OL830/OL840)	IDKOL400/800 OKI0867	TCOL400/800 OKI8664
OL400e series (OL400e/OL410e/OL600e/OL610e/OL810e/OP6e/OP6ex)	IDKOL400e/410e OKI4002	TCOL400e/410e OKI4000
OP4w/ OP4w plus	IDKOL4w OKI9044	TCOL4w OKI9043
OL1200/OP16n	IDKOL1200 OKI9060	TCOL1200 OKI9051
OP10i/OP12i/OP10ex	IDKOP10i OKI1013	TCOP10i OKI1012
OP6w/OP8w/OP8p/OP8z/OP8im	IDKOP8w/8p OKI0082	TCOP8w/8p OKI0085
OP20n/OP18/OP20n+/OP24dx	IDKOP20N OKI2026	TCOP20N OKI2025
OP14ex/OP14i	IDKOP14i OKI1412	TCOP14i OKI0141
B4100/B4200/B4250/B4300/B4350	IDKOB4300 OKI4301	TCOB4200 (B4100/4200/4250) Only TCOB4300 (B4300/4350) Only OKI4242 (B4100/4200/4250) only OKI3401 (B4300/4350) only
B6300	TCOB6300 OKIB6303	TCOB6300 OKI6303

OKI LED FAX MACHINES		
OKI MODEL	Drum	Toner
OF4100	IDKOL4w OKI0092	TCOL4w OKI9043
OF4500/OF4550/OF4580	IDKOP8w/8p OKI0090	TCOP8w/8p OKI0085
OF2200/2400/2600/OF1050/OF2350/OF2450/OF5200/OF5400/OF5500	IDKOL400e/410e OKI4002	TCOL400e/410e OKI4000
OF110/OF150/OF2300	IDKOL400/800 OKI0867	TCOL400/800 OKI8664
OF5700/OF5900	IDKOP10i OKI1013	TCOP10i OKI1012
OF5750/OF5950	IDKOF5750/5950 OKI5999	TCOF5750/5950
OF5780/5980	IDKOF5750/5950 OKI5999	TCOF5780/5980 - Only OF5780/5980 OKI0870